

Wildwood


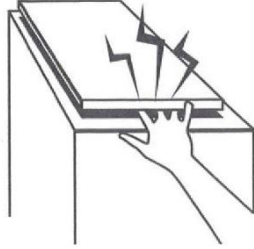
TV LIFT FURNITURE



360° SWIVELING MECHANISM TV BED SETUP INSTRUCTIONS

Safety Information

SEVERE PERSONAL INJURY AND PROPERTY DAMAGE CAN RESULT FROM IMPROPER INSTALLATION OR ASSEMBLY. READ THE FOLLOWING WARNINGS BEFORE BEGINNING

 <p>TV HAZARD</p>	 <p>CABINET TOP HAZARD</p>
<p>Caution:</p> <p>Avoid contact with the TV and Lift System during operation. Use with caution.</p>	<p>Caution:</p> <p>The cabinet lift top must be installed as described in the instructions, using the Steel Threaded Tapered Pins. Installing the cabinet top in any other fashion will create hazardous pinch points that can cause serious personal injury.</p>

Warnings:

1. Do not use this product for any application other than those specified by these instructions.
2. Do not exceed the weight capacity (80lbs). This can result in serious personal injury or damage to equipment or cabinet. It is the installer's responsibility to ensure that the weight of all attached components does not exceed that of the maximum figure stated.
3. Follow all technical specifications and instructions during the installation.
4. Only use attachments/accessories specified by the manufacturer.
5. Close supervision is necessary when this system is being used by, or near children, or disabled persons.
6. Read all technical instructions fully before installation and use. It is the installer's responsibility to ensure that all documentation is passed on to the users and read fully before operation.
7. Risk of electric shock. Do not attempt to open the Control Box.
8. To reduce the risk of fire or electric shock, do not expose parts to rain or other liquids.
9. Protect the power cord from being walked on or pinched.
10. Keep all documentation.
11. Heed all warnings.
12. Clean only with a dry cloth
13. Anti-tip hardware must be used to secure the TV Lift Footboard if used on a standalone basis.
14. Refer all service questions to Wildwood TV Lift Furniture if the system does not operate normally.

Wildwood TV Lift Furniture ("Wildwood") disclaims any liability for modifications, improper installations, or installations over the specified weight range. Wildwood will not be liable for any damages arising out of the use of, or inability to use this products. Wildwood bears no responsibility for incidental or consequential damages. This includes but is not limited to, any labor charges for the servicing of Wildwood products performed by anyone other than Wildwood.

Wildwood intends to make this, and all documentation as accurate as possible. However, Wildwood makes no claim that the information contained herein covers all details, conditions, or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this documentation is subject to change without prior notice or obligation of any kind. Wildwood makes no representation or warranty, expressed or implied, regarding the information contained herein. Wildwood assumes no responsibility for the accuracy, completeness, or sufficiency of the information contained in this document.

Contents

Tools Needediii

Bed Assembly: Steps 1 - 4 1

 Step 1 – Headboard Assembly (Options A & B) 1

 Steps 2 & 3 – Connecting the Captain’s Bed (Options A & B)..... 3

 Step 4: Connecting the Footboard and Cabinets..... 9

Mechanism Installation: Steps 5 - 17 10

Optional Step: Setting the Height Limit 16


TV Mounting: Steps 18 - 22..... 21

Mattress Support Installation: Step 23 26


For any questions or concerns during the installation process, please contact our customer service team at (866) 725-6401.

Tools Needed


Tape Measure

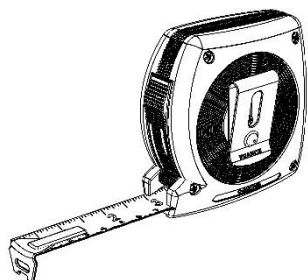


Power Screwdriver

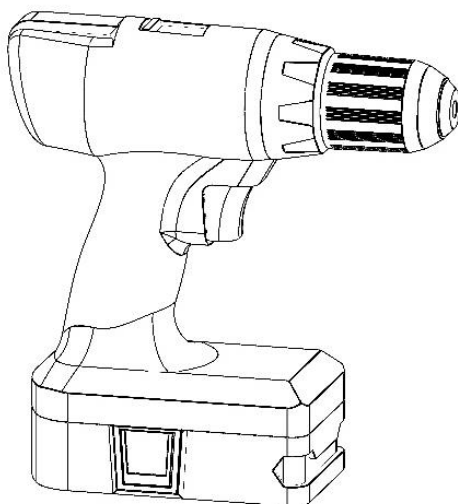


Phillips Driver



Phillips Screwdriver

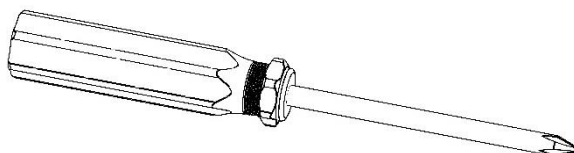


10 mm Socket

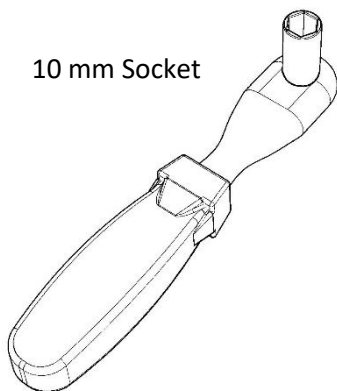

OR


10 mm Wrench

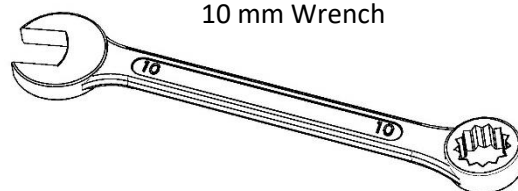

Bed Assembly: Steps 1 - 4

30mm Furniture Screw (11)

Hardware

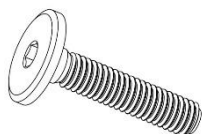

Step 1 – Headboard Assembly (Options A & B)

The headboard will have one of two different construction methods, based on the style of headboard. Non-column style headboards will follow Option A while column style headboards will follow Option B.


Option A

Locate the Headboard and Columns.


Left Column

Headboard

Right Column

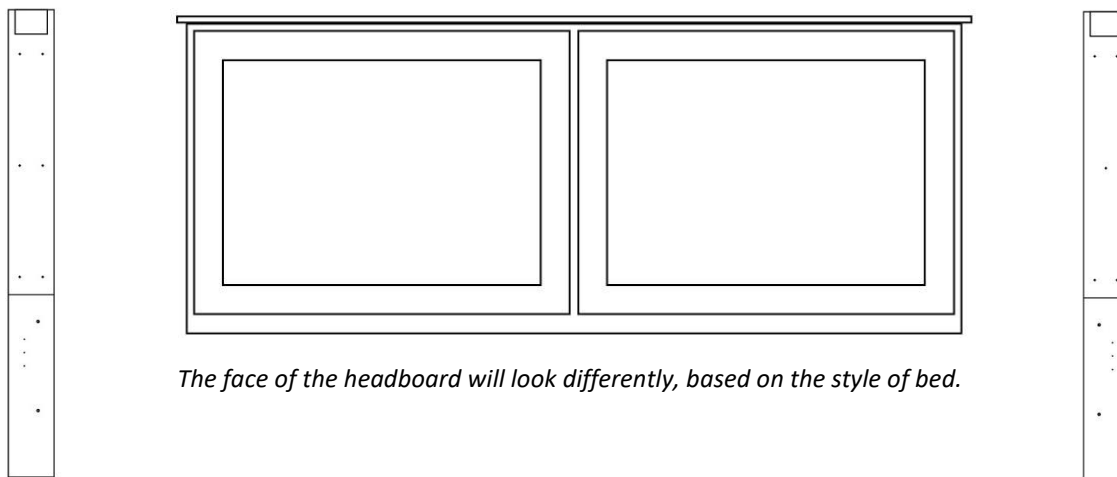


Lay the Headboard Panel flat on the ground, face down. Use the 30mm Furniture Screws to attach the columns to the back of the Headboard Panel, as illustrated. Use 5 furniture screws on the right column, and 6 furniture screws on the left column.

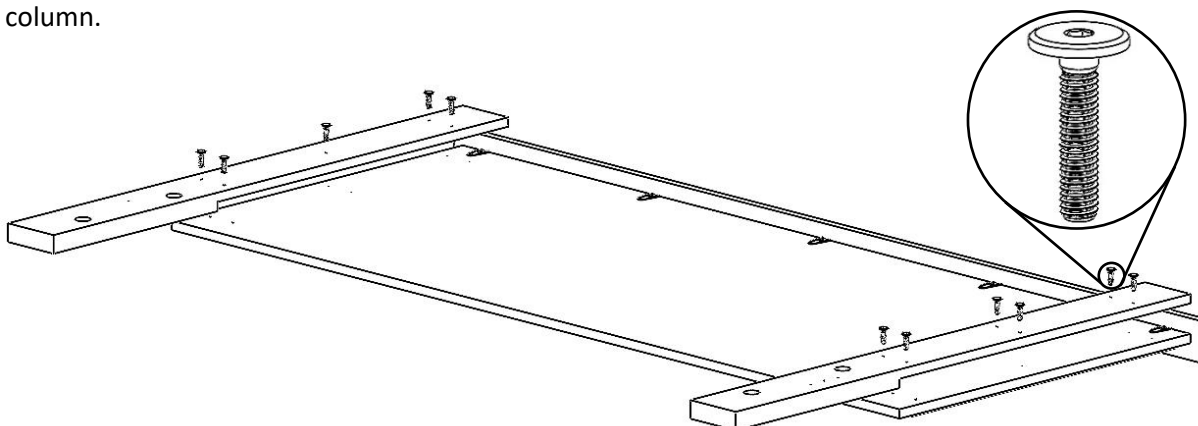


Option B


Locate the Headboard and Columns.

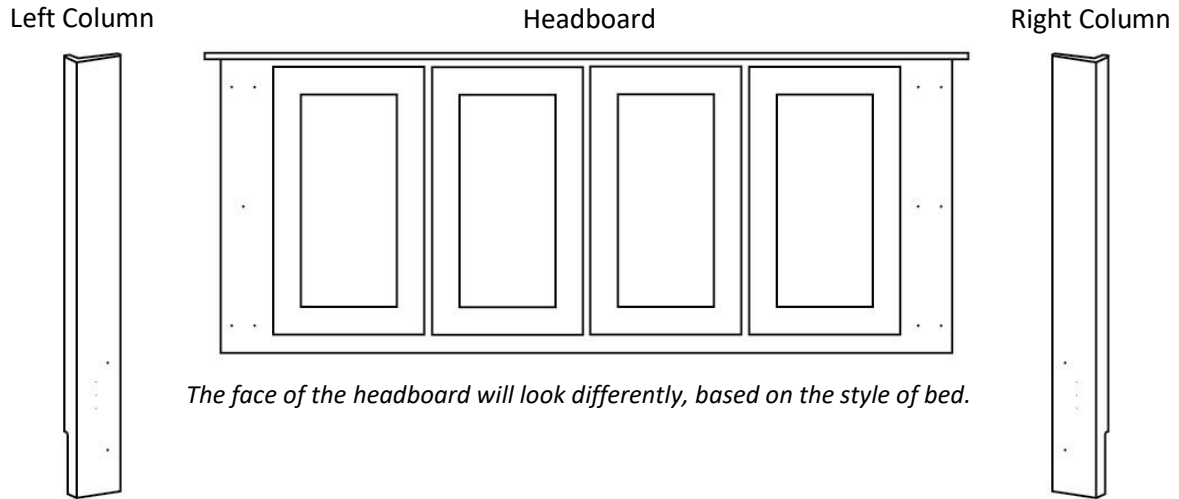

Lay the Headboard Panel flat on the ground, face down. Slide the Columns underneath so the headboard is resting on the columns.

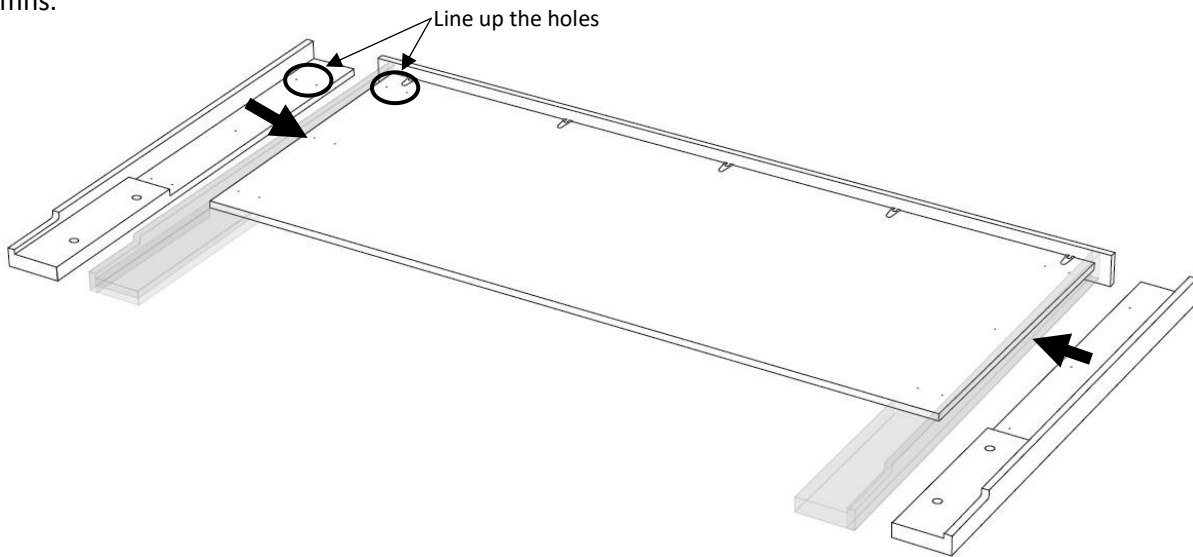

Use the 30mm Furniture Screws to attach the columns to the front of the Headboard Panel, as illustrated. Use 5 furniture screws on the right column, and 6 furniture screws on the left column.

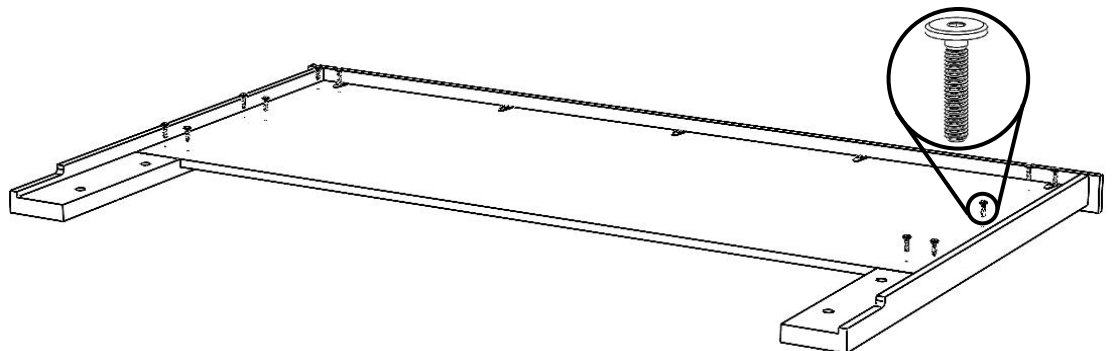


Steps 2 & 3 – Connecting the Captain's Bed (Options A & B)


The Captain's Bed Cabinets will have one of two different construction methods, determined by the purchase of optional nightstands. For a standard bed, follow Option A. If nightstands have been purchased, follow Option B, beginning on page 6.

Step 2 – Setup (Option A – No Nightstands)

Place the Headboard **leaning** (so it does not fall over accidentally) against the intended wall.

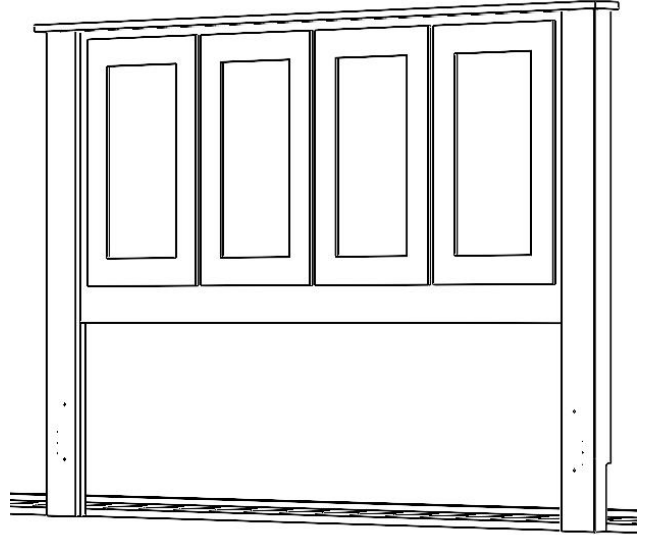

Place the Captain's Bed Cabinets against the Headboard with the Drawers facing out.

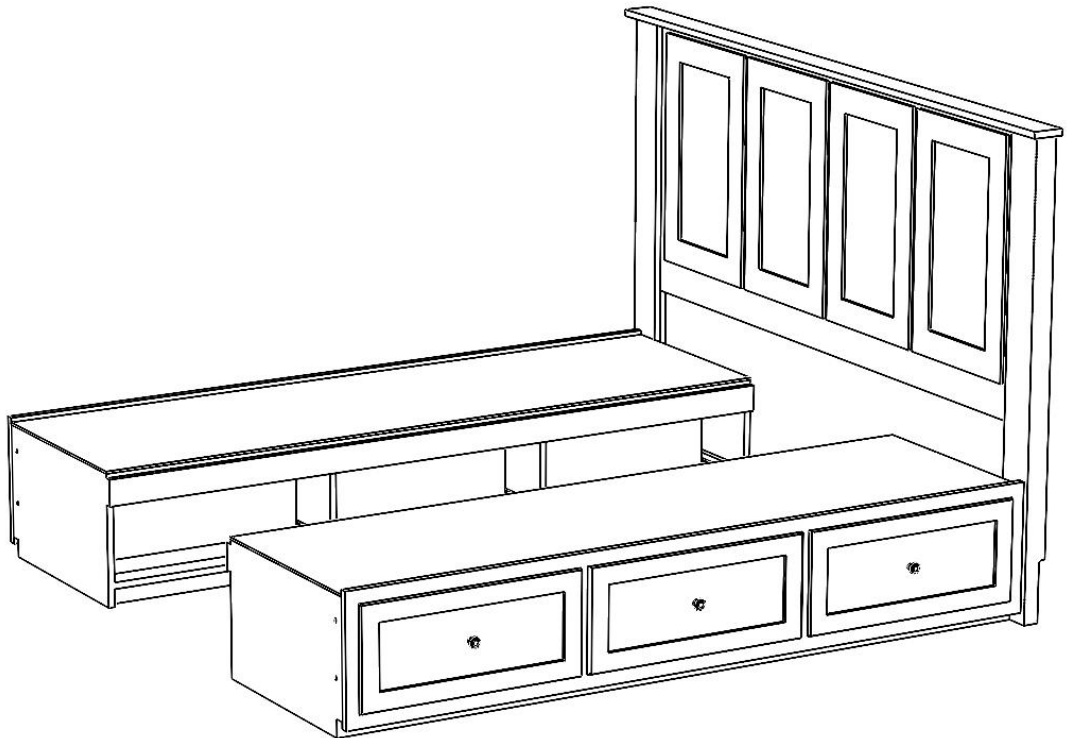


Hardware

45mm Furniture Screw (4)




Step 3 – Connecting the Headboard and Cabinets (Option A – No Nightstands)

Open and remove the Drawer nearest the Headboard to gain access to the slots for the Furniture Screws.

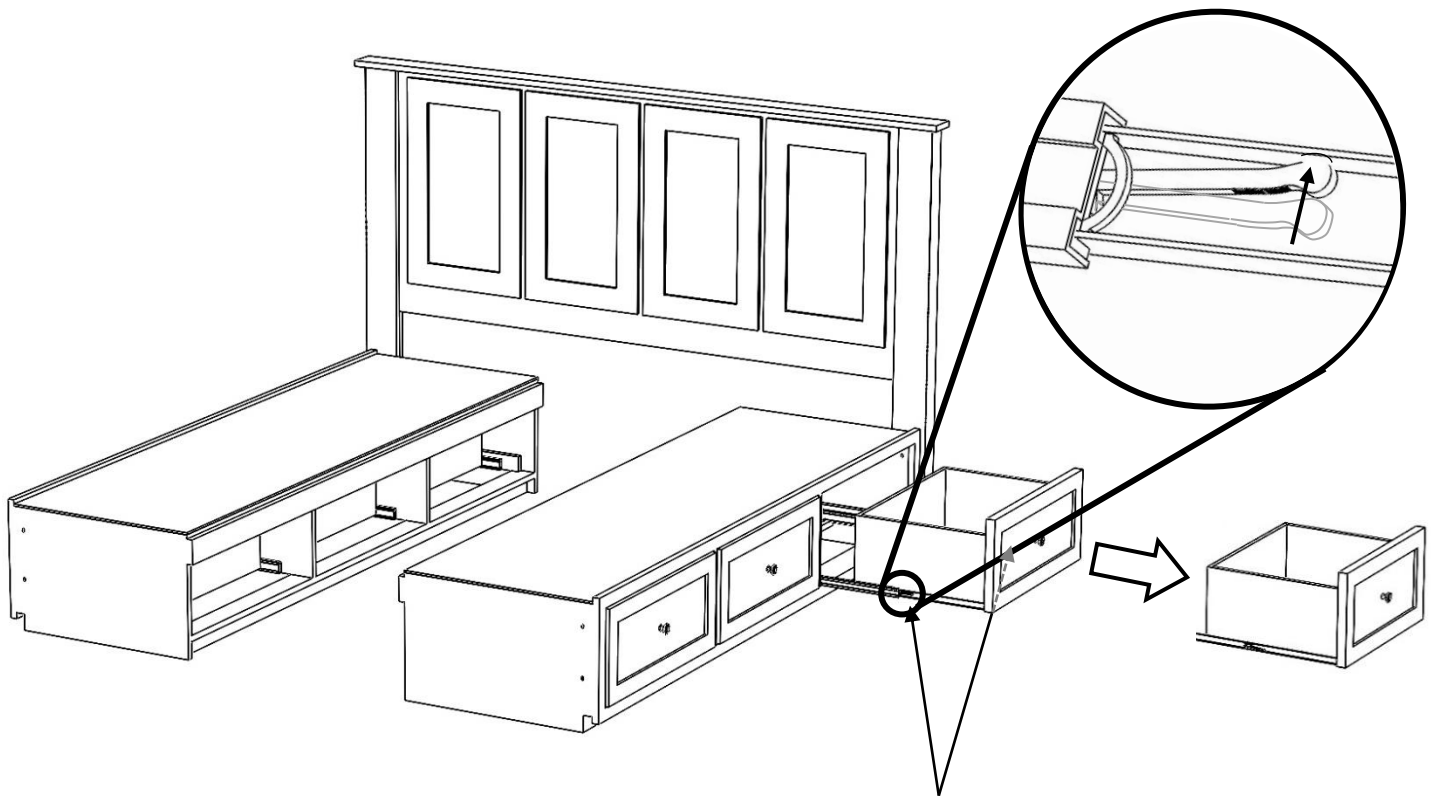


Note: To remove the drawer, extend drawer out fully. Then find the slide release (see illustration). Push UP on the LEFT slide release and DOWN on the RIGHT slide release and slide drawer out of the cabinet.

With the drawer removed, the slots in the cabinet sides are now accessible line up the slots in the end of the Captain's Bed Cabinets with the 2-hole pattern on the Headboard Columns.

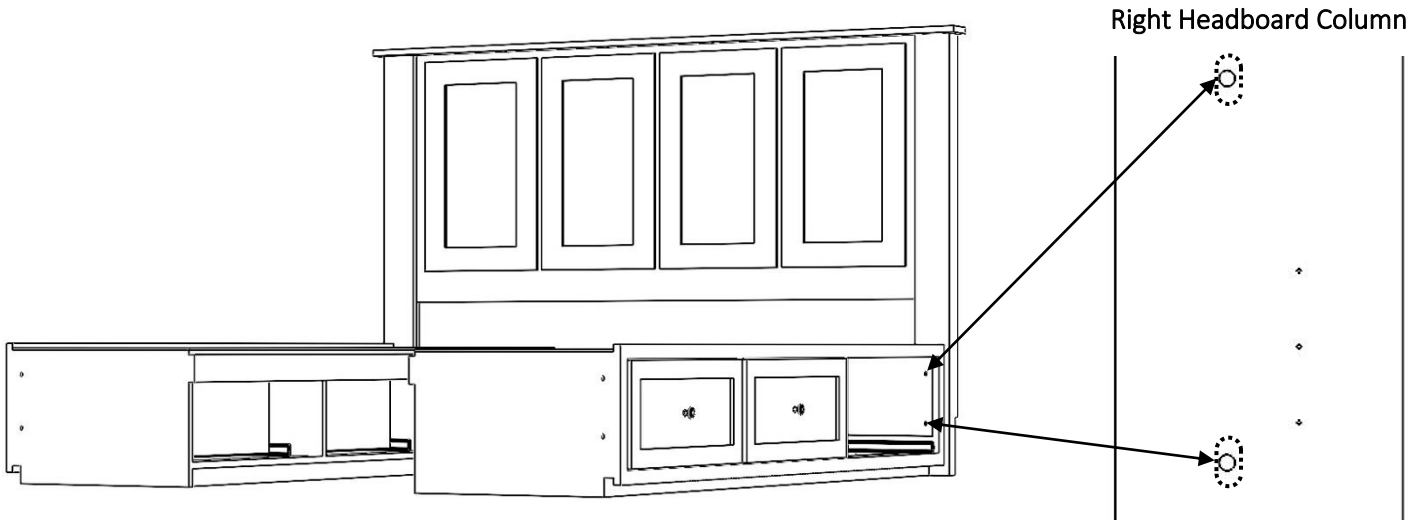


Use four 45mm Furniture Screws to attach the Captain's Bed Cabinets to the Headboard as illustrated.

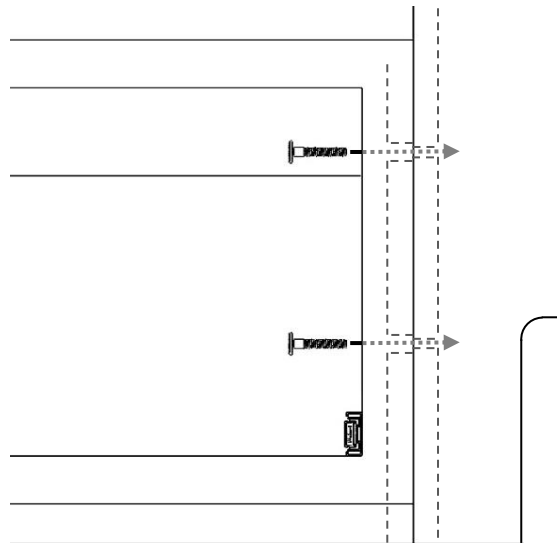


After completion, skip to page 9 for Step 4.

Step 2 - Set Up (Option B – Beds with Nightstands)

Place the Headboard **leaning** (so it does not fall over accidentally) against the intended wall.

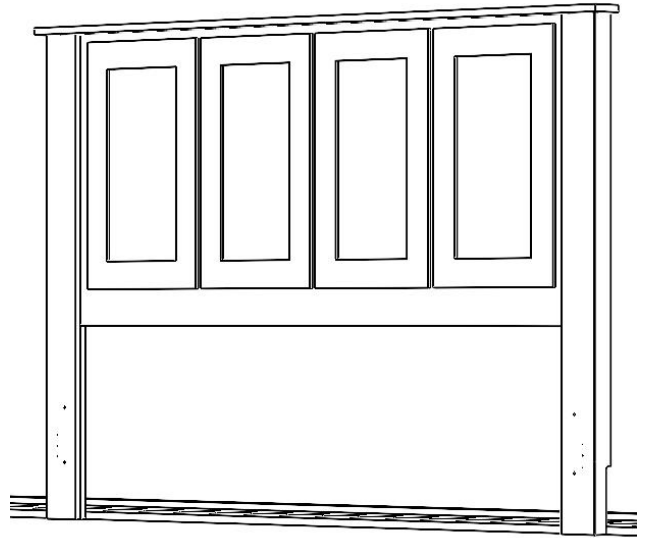

Place the Captains Bed Cabinets against the Headboard with the Drawers facing out, and the panel closest to the Headboard.

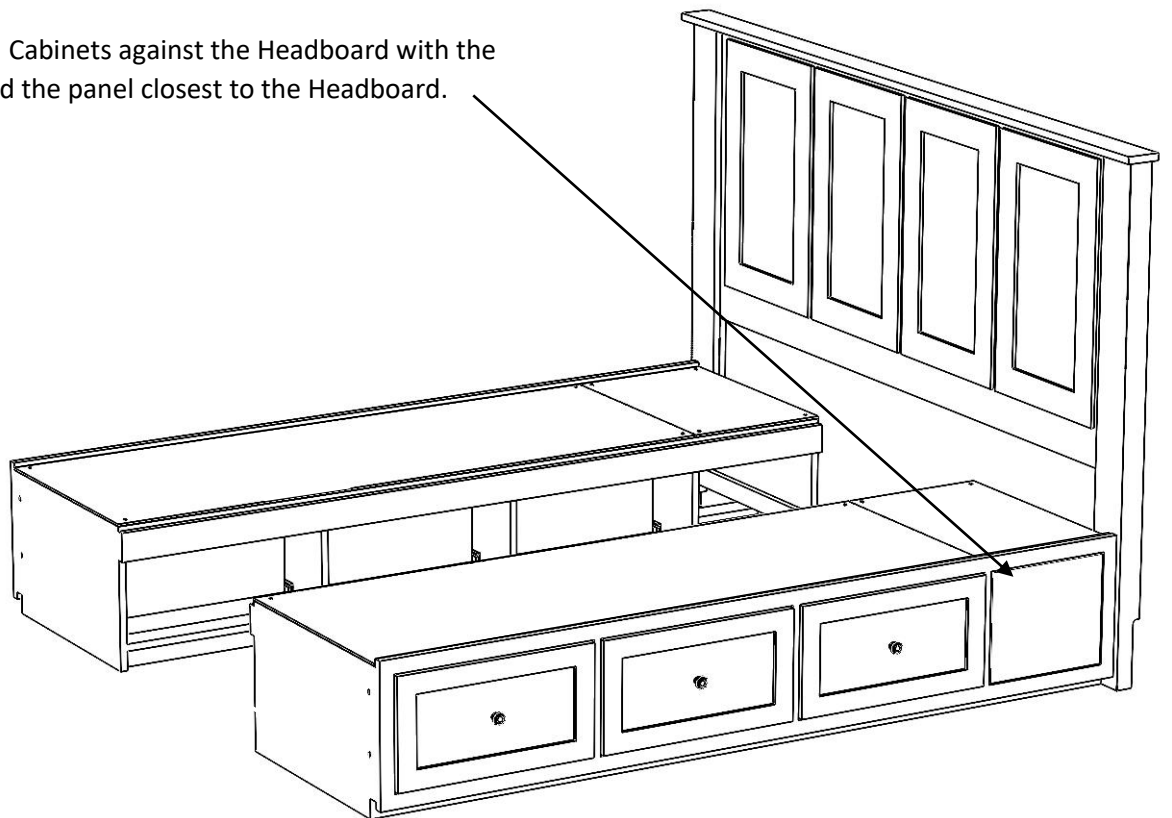


Hardware

45mm Furniture Screw (4)




4mm Allen Wrench

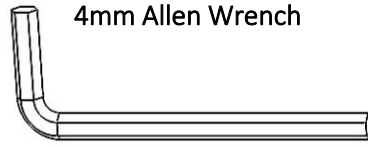


Step 3 - Set Up (Option B - Beds with Nightstands)

Use a Phillips Screw Driver to remove the $\frac{5}{8}$ " Pan-head Screws from the Mattress Decking section nearest the Headboard. Set the Mattress Decking and screws aside.

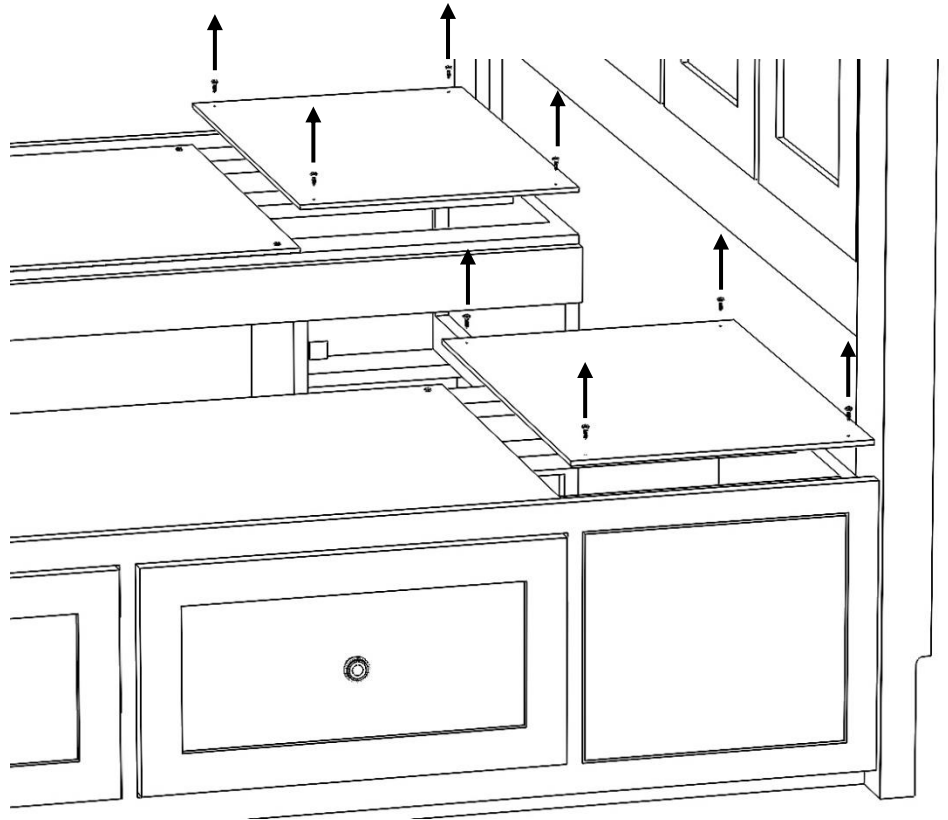


Left Headboard Column

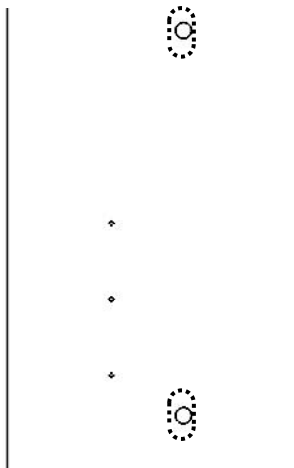


Line the Slots in the end of the Captains Bed Cabinets up with the 2-hole pattern on the Headboard Columns

Use four 45mm Furniture Screws to attach the Captains Bed Cabinets to the Headboard as illustrated.

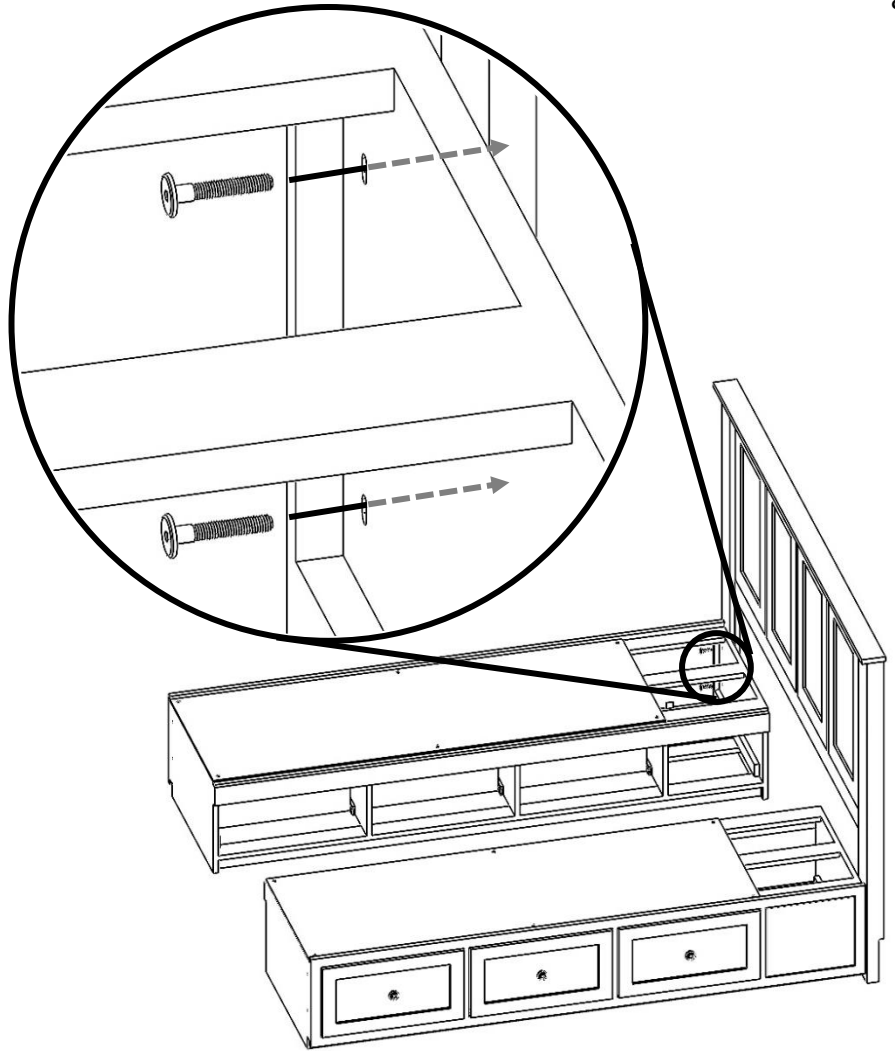

With the Captains Bed Cabinets attached to the Headboard, re-install the decking section using the $\frac{5}{8}$ " Pan-head screws.

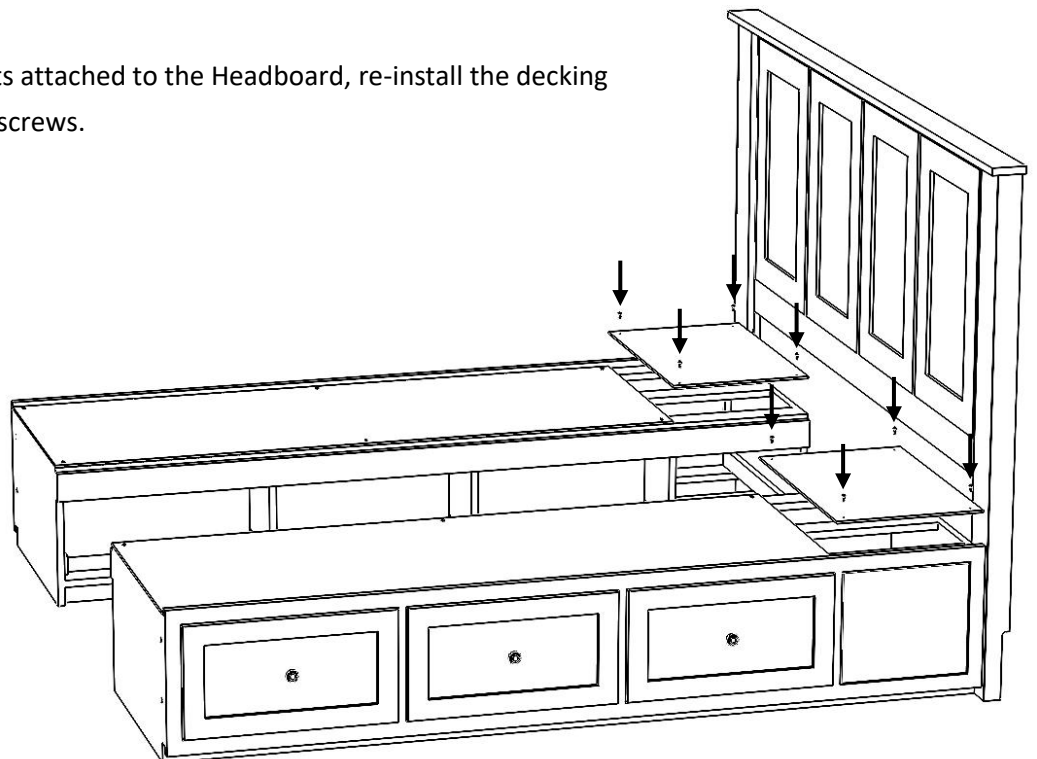


Hardware

45mm Furniture Screw (4)




Step 4: Connecting the Footboard and Cabinets

Move the Footboard into place, lining up the 2-hole patterns with the slots.

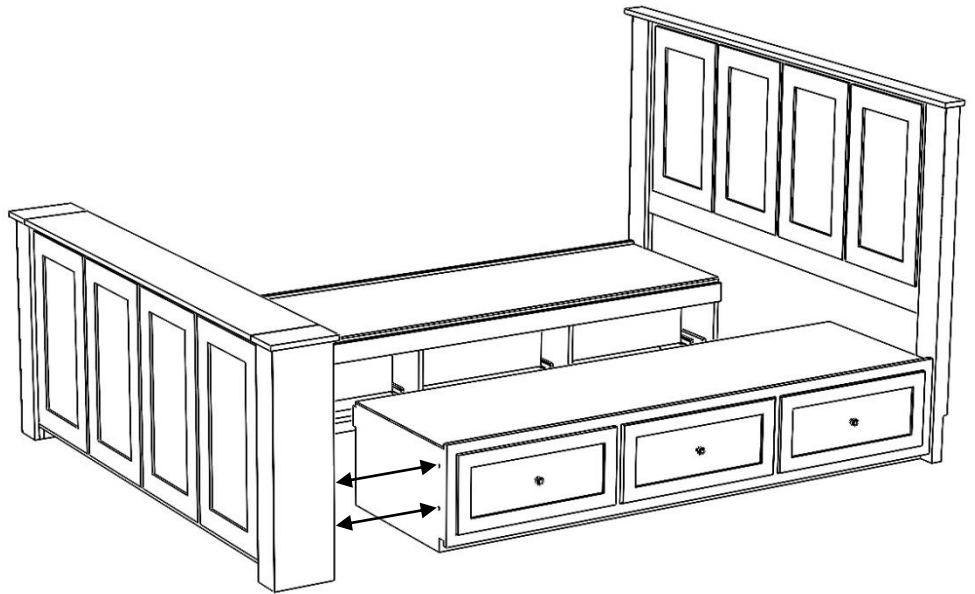


Open and remove the Drawer nearest the Footboard to gain access to the slots for the Furniture Screws.

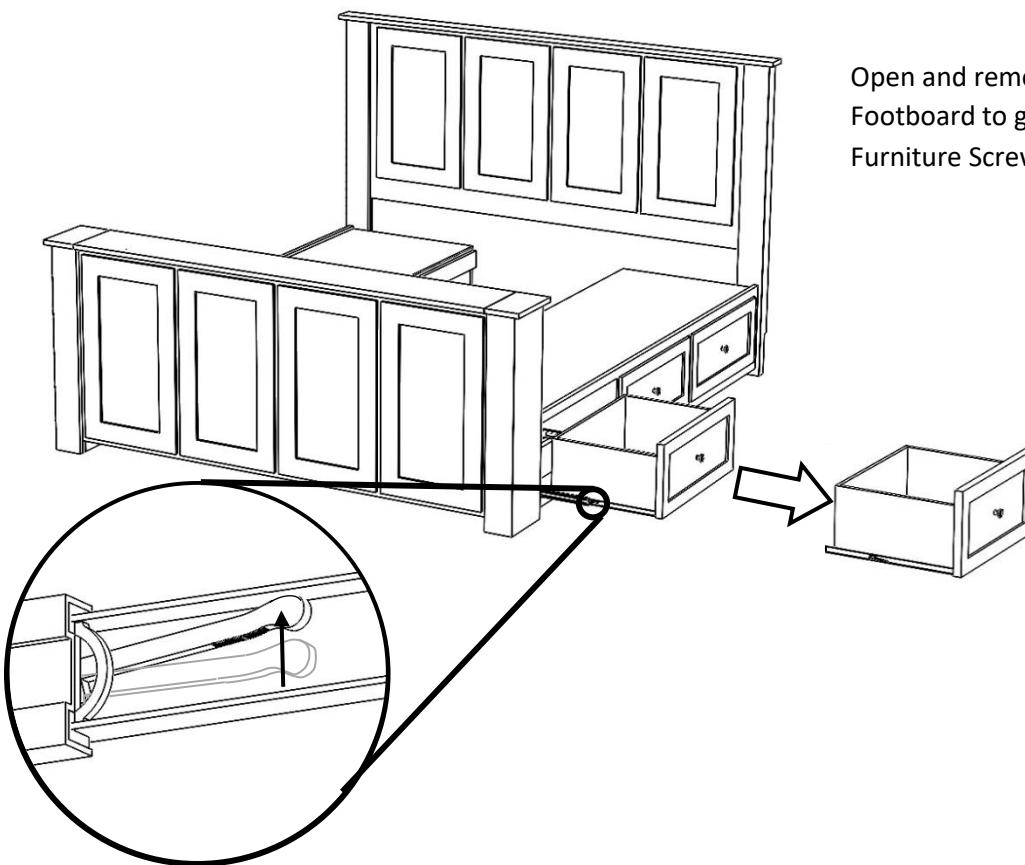

Mechanism Installation: Steps 5 - 17

Lift Column Base

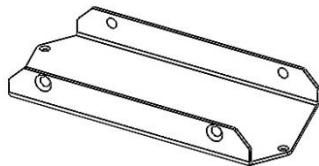


Hardware

M6x12 FHMS (4)




Step 5: Lift Column Base

Place the Lift Column Base at the base of the Lift Column. Once in place, attach the Lift Column Base to the Lift Column using four M6x12 FHMS.

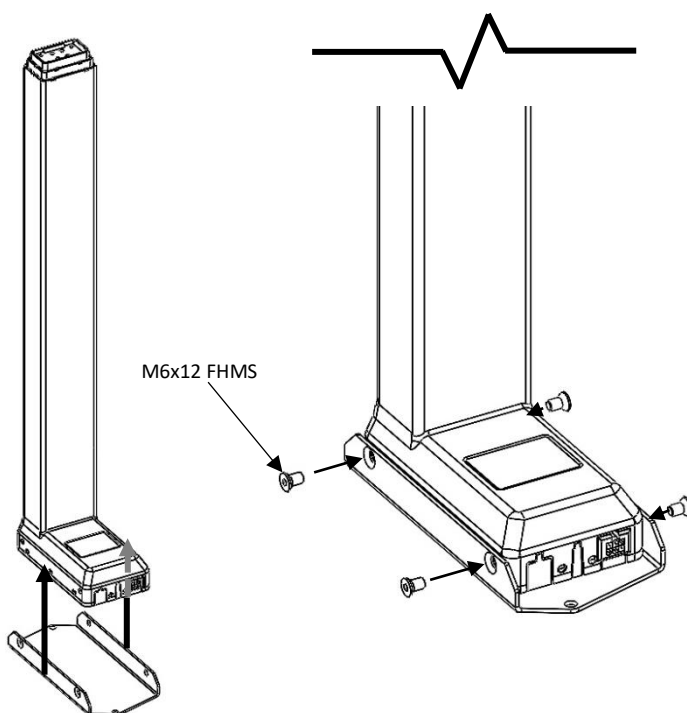


Column Clamp Base

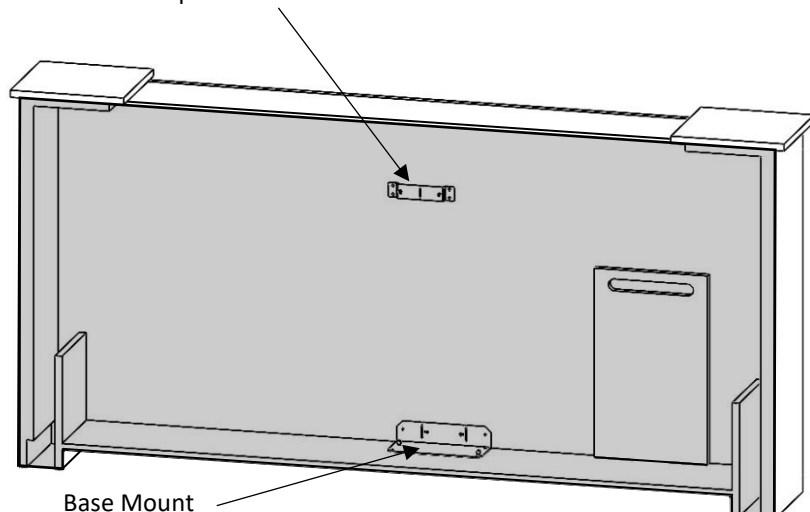


Step 6: Lift Column

Inside of the Footboard there is some pre-installed hardware. The Lift Column will attach to this hardware.

Place the Lift Column inside of the Footboard as illustrated. Align the holes in the Lift Column Base with the threaded posts in the Base Mount.

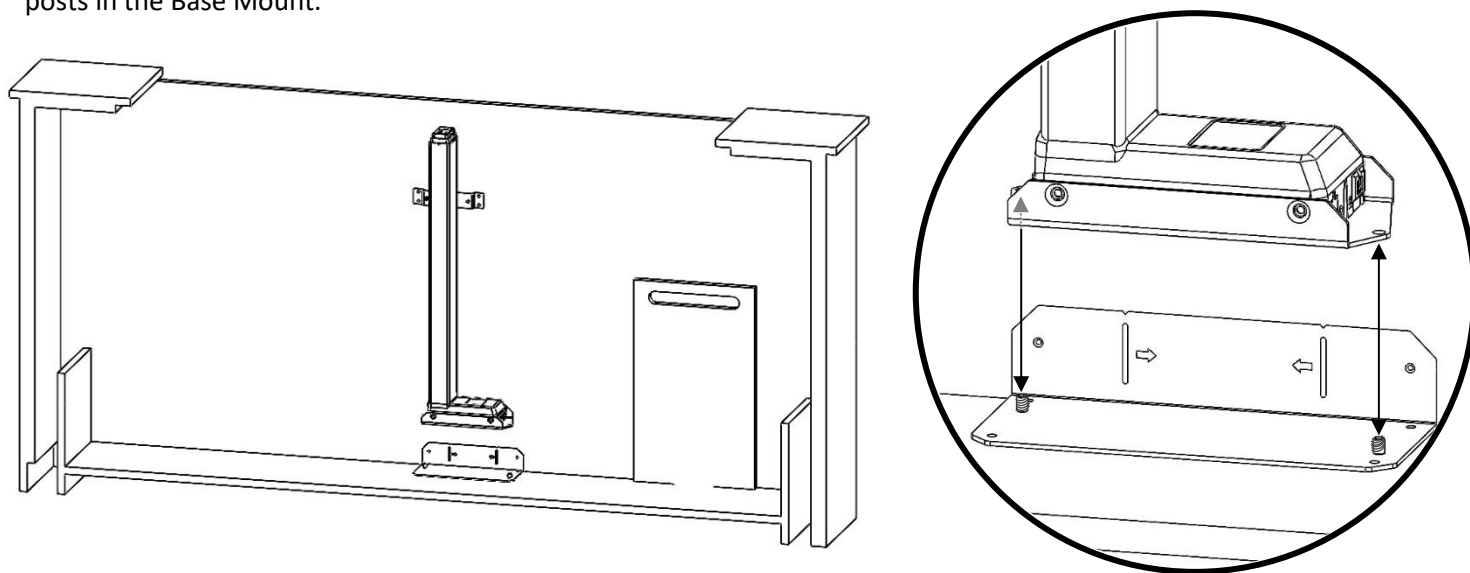


Column Clamp Extension

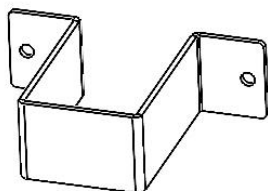


Hardware

Thumb Screw (2)

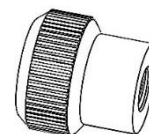



Step 7: Column Clamps

Slip the Column Clamp Extension around the Lift Column lining up the holes in the Column Clamp Extensions with the threaded posts in the Column Clamp Base. Attach the Lift Column to Footboard using Thumb Screws on the threaded posts.

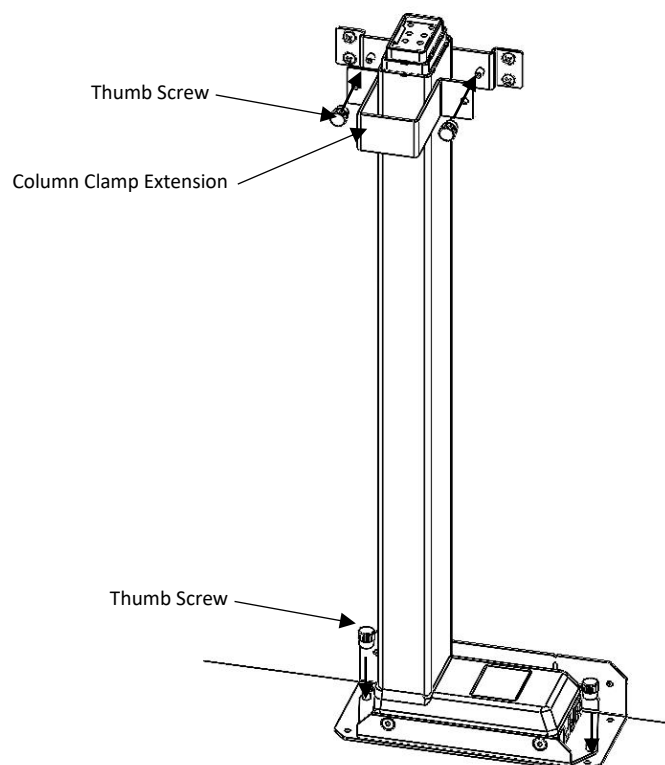

Step 8: Separating the Swivel Mechanism


Locate the Swivel Mechanism. Separate the Mechanism by pulling the lower and the upper sections apart. The auxiliary cord will remain attached to the base.

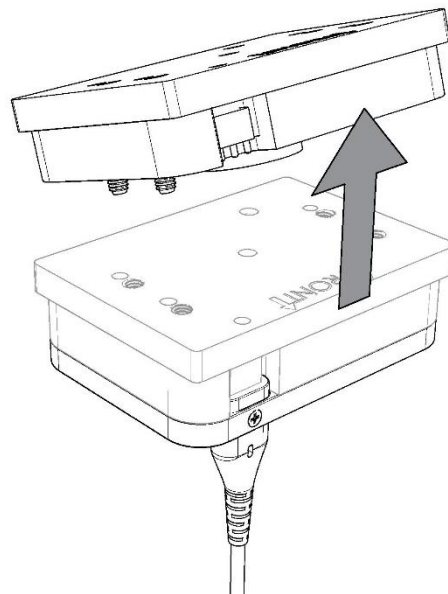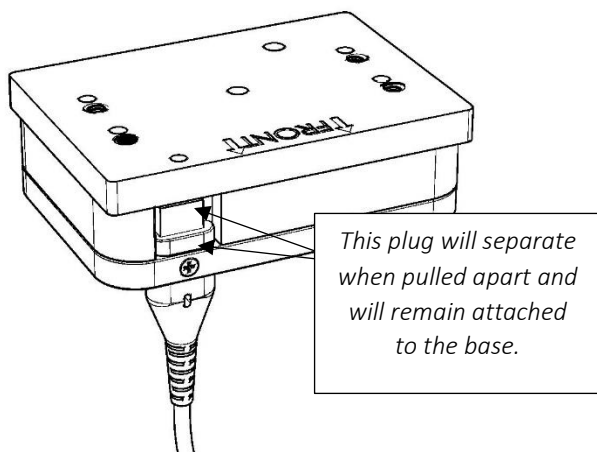



6x16 FHMS (4)**Hardware****Step 9: Swivel Mechanism Base**







Attach the lower portion of the Swivel Mechanism to the top of the Lift Column using four 6x 16 FHMS.

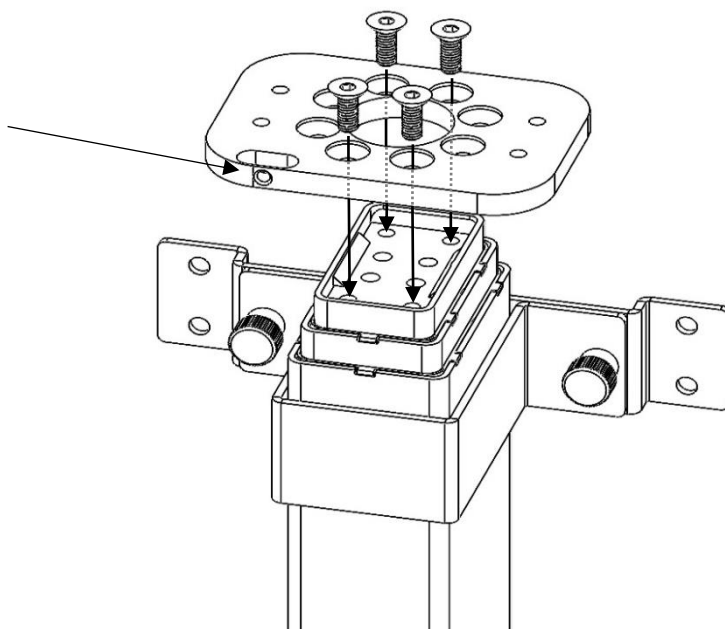Though not shown in this image, the wire and plug that is screwed to this part should still be attached.

**Step 10: Swivel Mechanism Assembly**

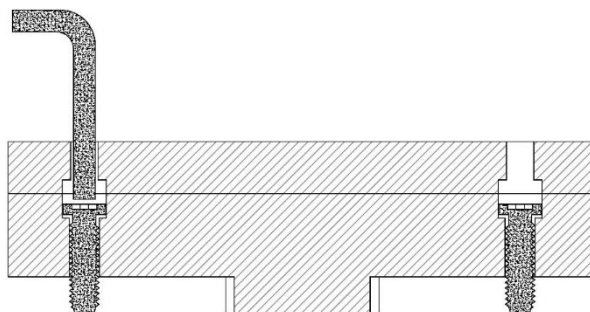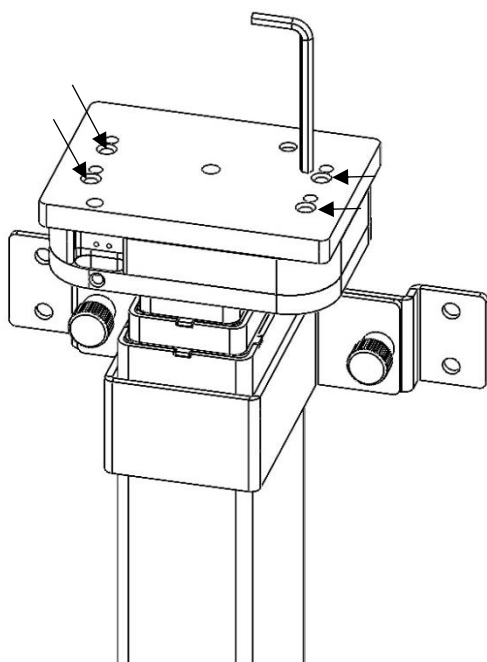
Put the Swivel Mechanism back together and secure it using the factory-installed screws, set inside the mechanism. Use the small hex key in the unthreaded holes to tighten the screws.

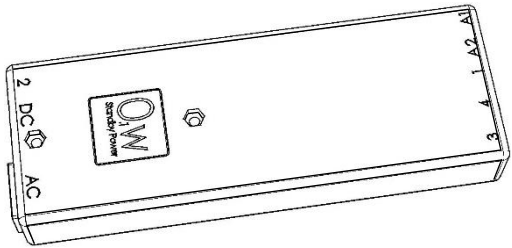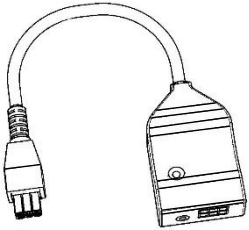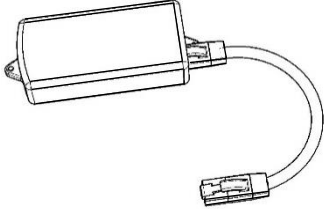


Hardware		
Control Box	Interface Cable	RF Receiver
		
10x1 $\frac{3}{4}$ " FHWS (2)	L-65 Swivel Hardware (1)	$\frac{3}{4}$ " RHWS (2)
		
These screws are used to attach the electronic parts to the electronic panel.		

Step 11: Electronics



The Electronics Panel is a cabinetry part attached inside the footboard. Remove the panel from the footboard using the Small Hex Key (Allen wrench). Save the furniture screw for reinstallation. Follow the chart above as well as the image below to attach the electronics to the Panel. Then plug the cords into the Control Box, as illustrated.

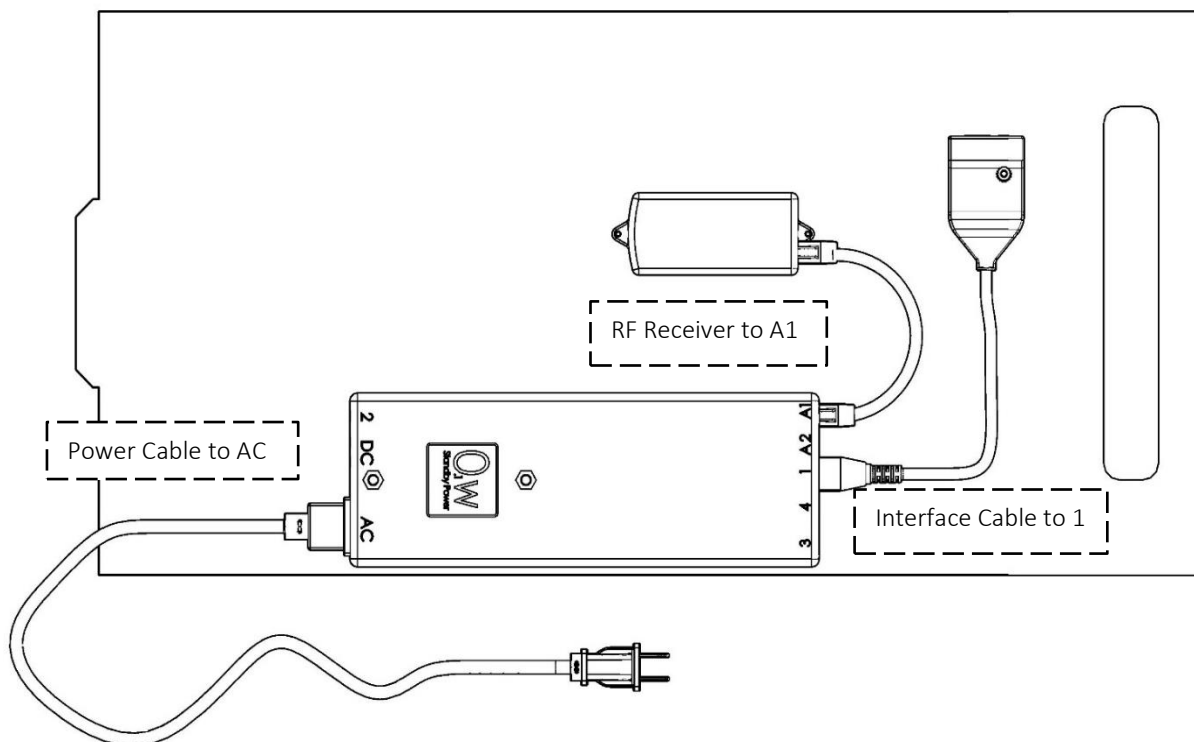

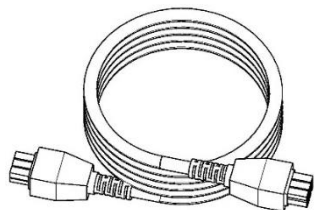
Motor Cable**Hardware****30mm Furniture Screw**

Step 12: Electronics Panel

Set the Electronics Panel back into the footboard aligning the tab on the bottom of the panel with the cut out in the bottom of the footboard. Then, re-use the 30mm furniture screw to attach the Electronics Panel to the footboard face.

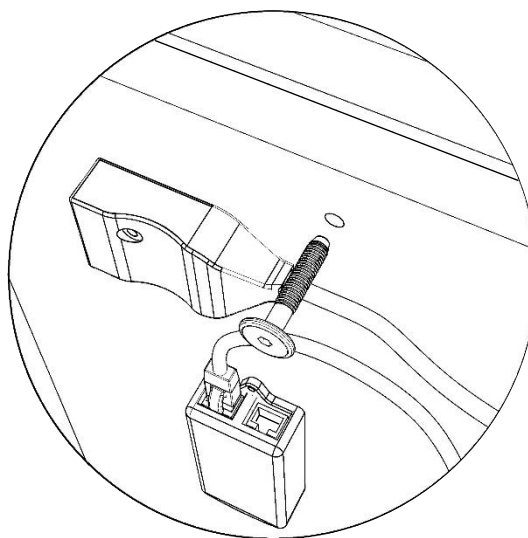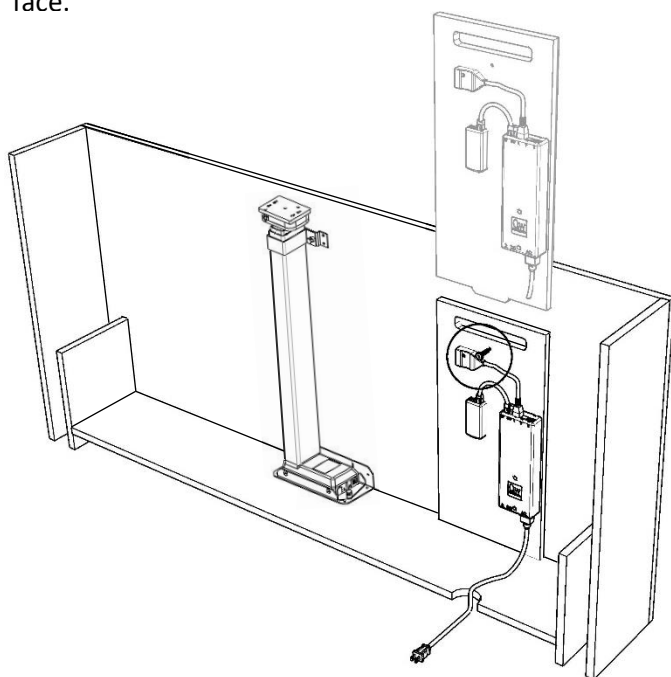


Once the Electronics Panel is installed, Plug the Motor Cable into the the Interface Cable and in to the base of the Lift Column.

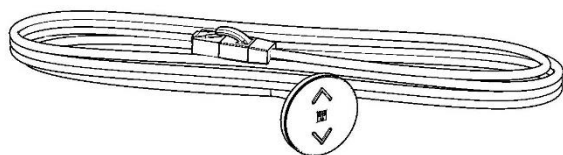
Back up Switch**Hardware**

Step 13: Backup Switch


Feed the wire of the Backup Switch through the hole cut into the back of the Footboard.

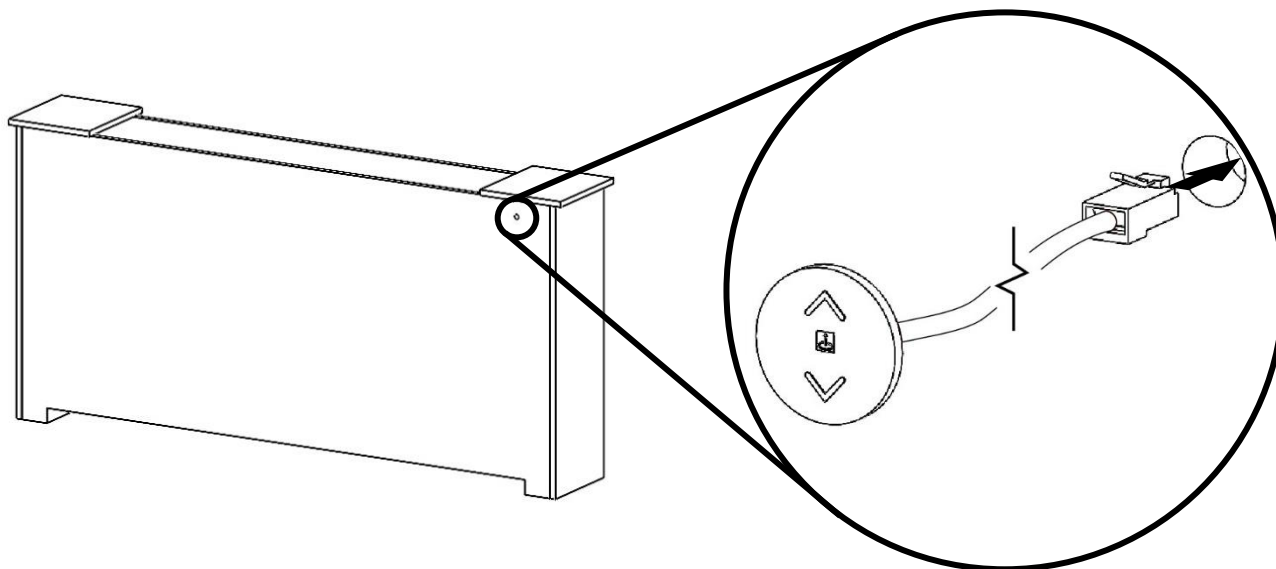

Peel the paper off of the back up the switch and stick the switch to the back of the Footboard

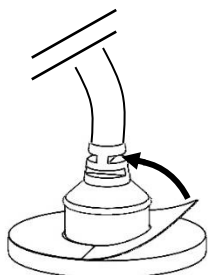



Inside of the Footboard, plug the Backup Switch into the "A2" port of the Control Box.

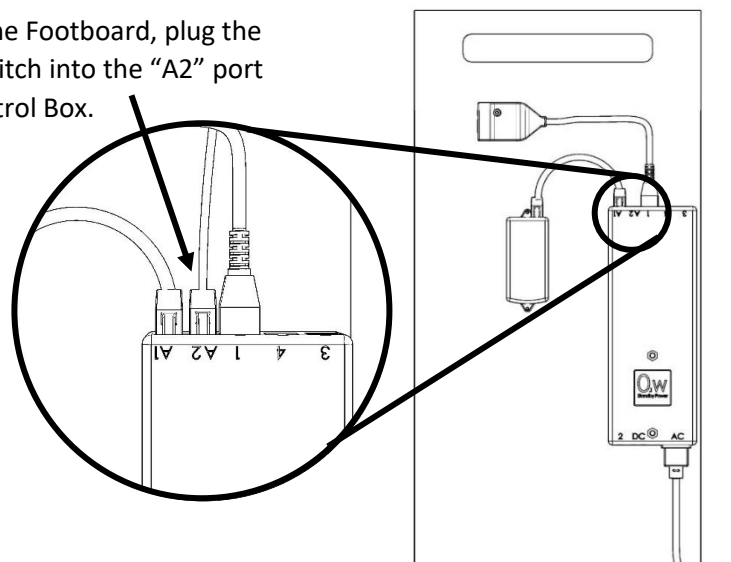

Optional Step: Setting the Height Limit


You have the option of restricting the height that the mechanism rises. To do so, use the remote or the wired backup switch to extend the Mechanism to the desired height. Once done, plug the Height Restrictor into the RF Receiver.

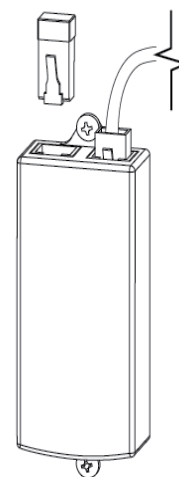

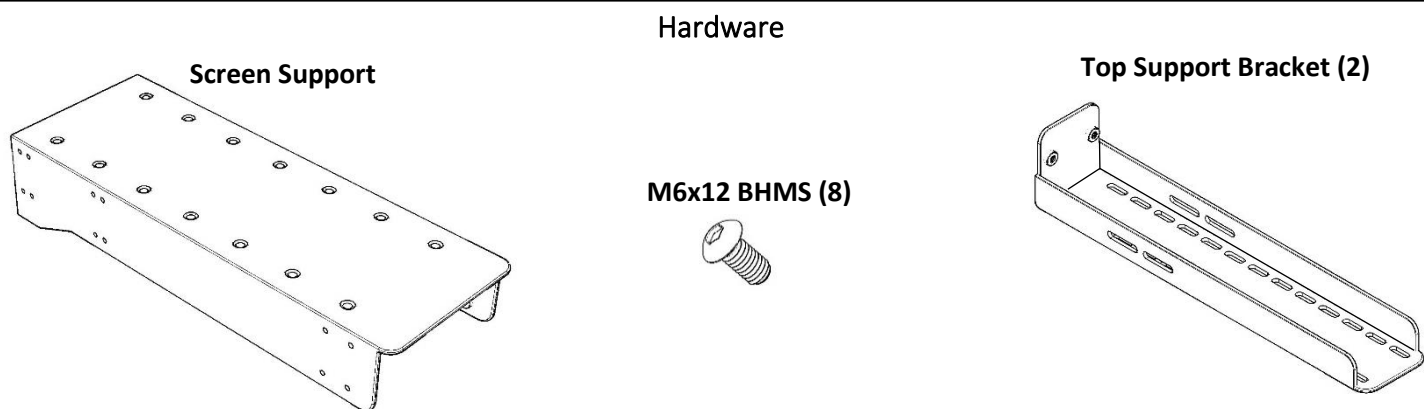

Step 14: Top Support Brackets

Attach the Top Support Brackets to the Screen Support using eight M6x12 BHMS. The brackets should overhang the top of the screen support by $\frac{1}{4}$ ". Attach the Brackets to both sides of the Screen Support.

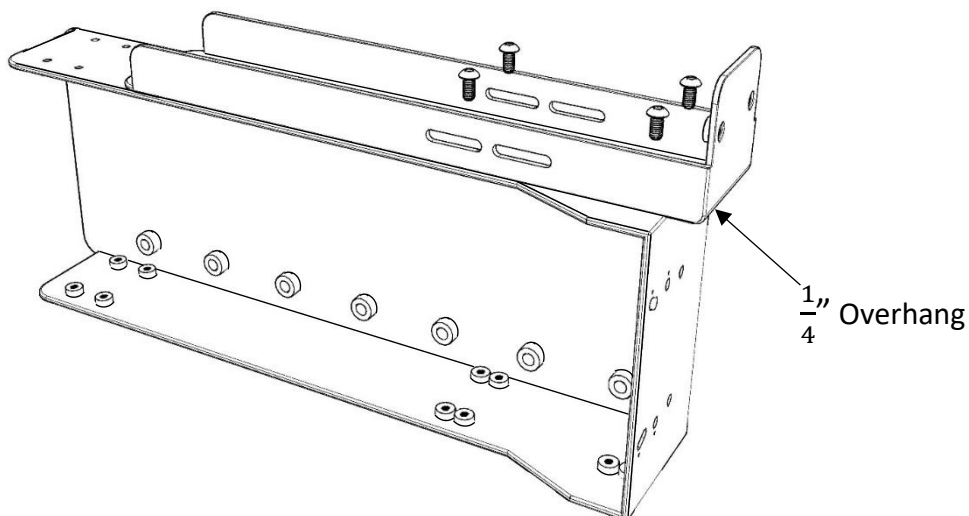


Hardware


M6X16 FHMS (4)



Step 15: Screen Support



Attach the Screen Support to the top of the Lift Column using four M6x16 FHMS.

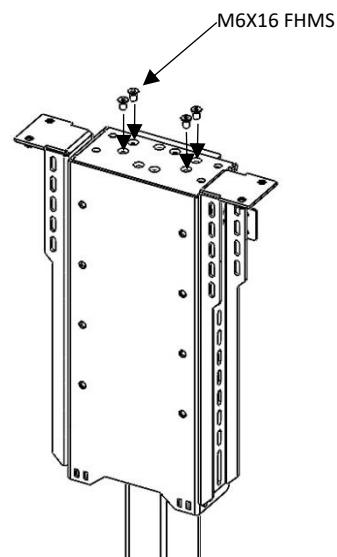

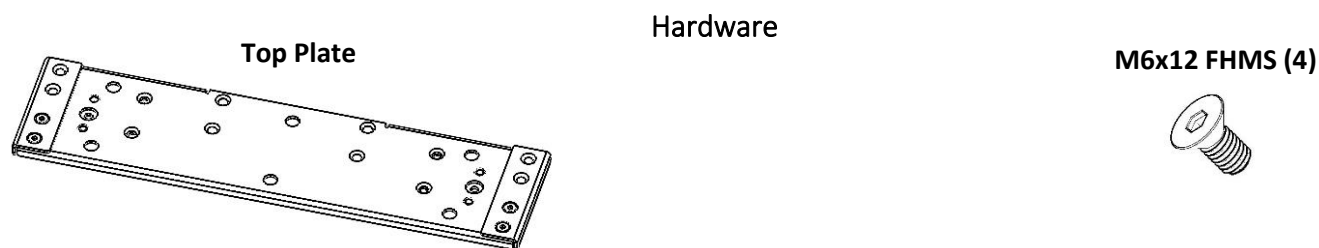


Step 16: Top Plate

Attach the Top Plate to the Top Support Brackets using four M6x12 FHMS.

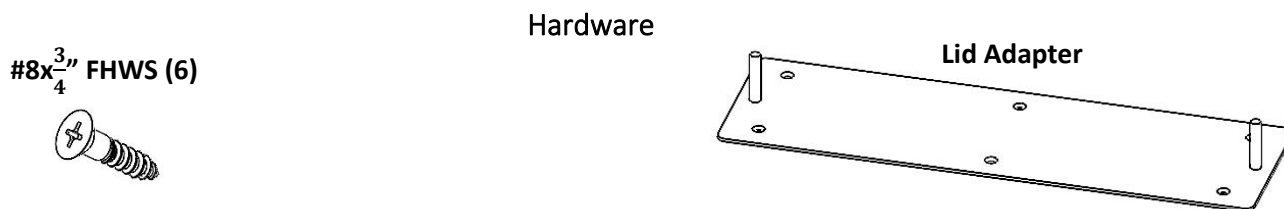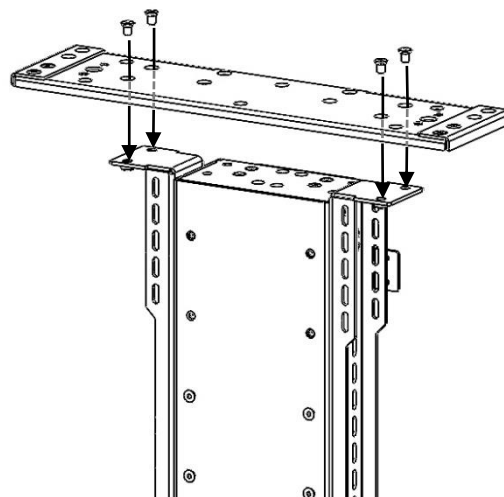


Step 17: Footboard Lid


Locate the Footboard Lid. Attach the Lid Adapter to the Footboard Lid using six #8x $\frac{3}{4}$ " FHWS, aligning the holes in the Lid Adapter with the predrilled holes in the Footboard Lid.

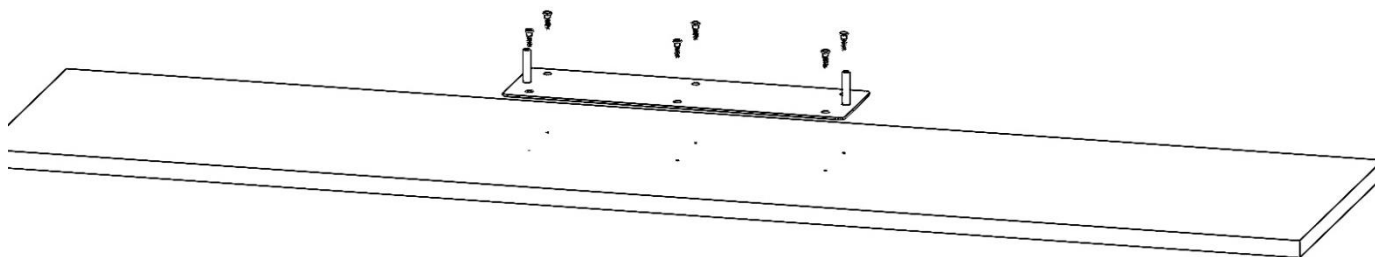


Set the Footboard Lid in place on the Footboard lining up the posts of the Lid adapter with the holes in the Top Plate as shown.

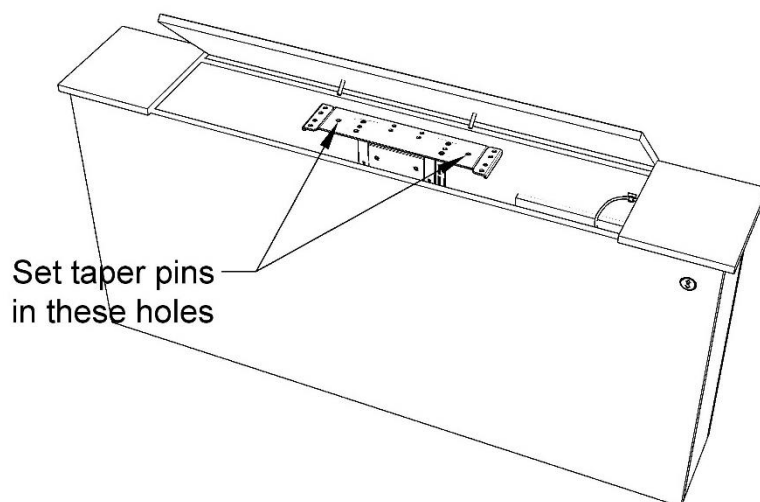

Bird's-eye X-ray


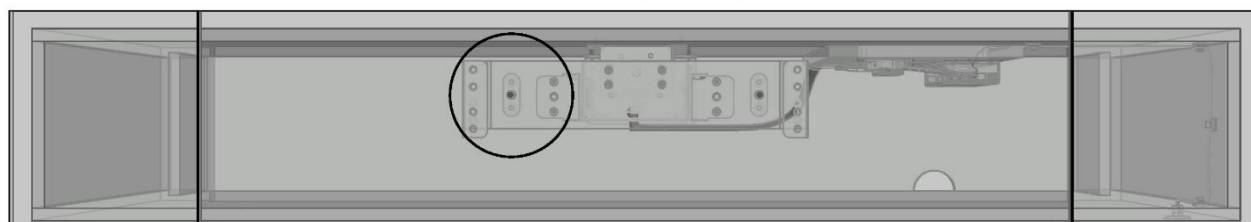


The plates around the posts are adjustable to allow alignment for the lift top. Push against the top to move the plates front to back and side to side until the top is aligned with the side tops.

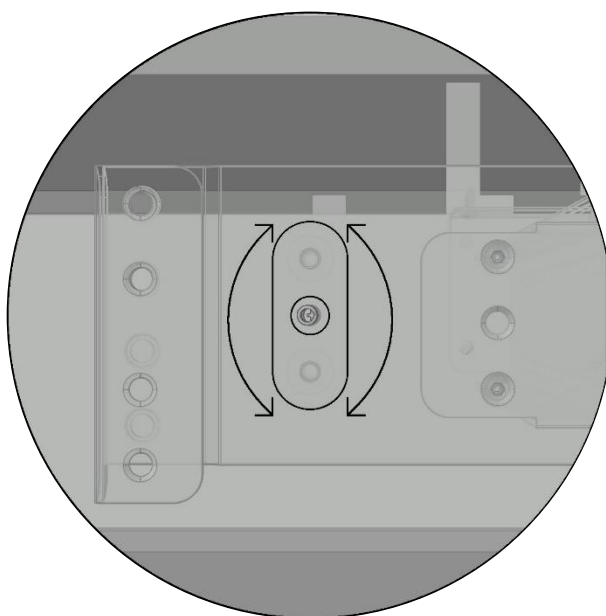


Plug the cable leading from the power strip into an outlet to get power to the mechanism.

Use the remote or the wired backup switch to raise the mechanism. Then, use a 10mm wrench or socket wrench to tighten the nuts around the posts of the Lid Adapter, doing so secures the top into position on the mechanism.

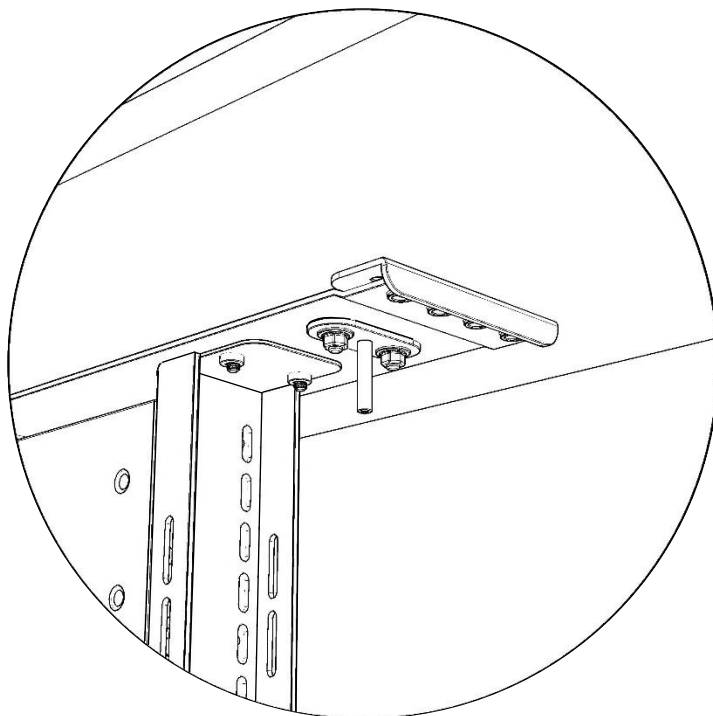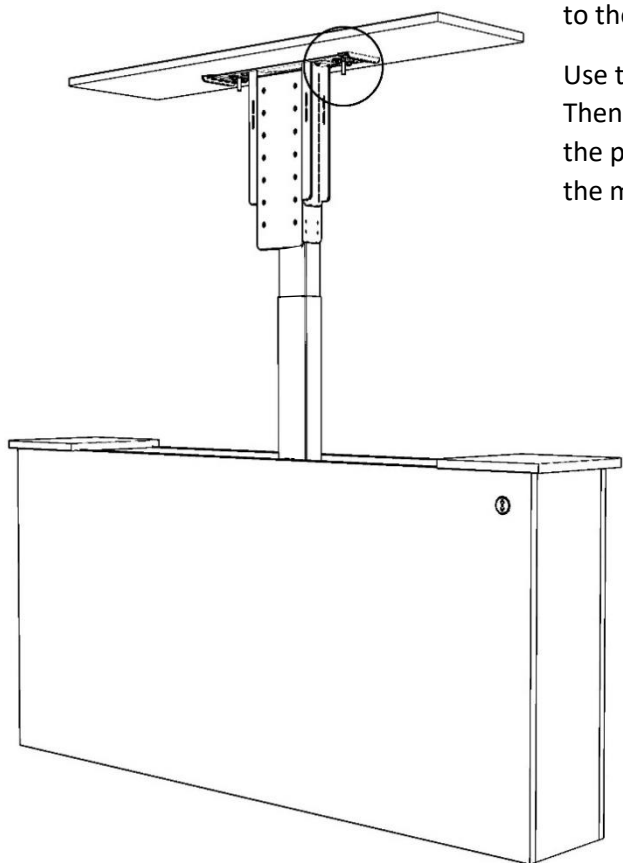


TV Mounting: Steps 18 - 22


Hardware

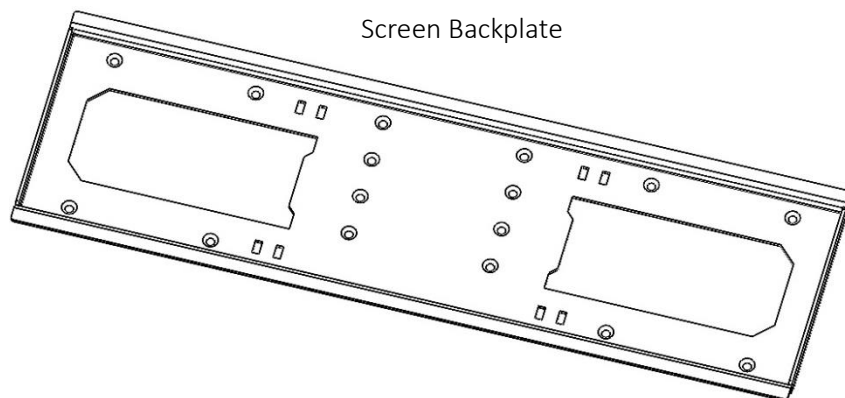


1" Spacer

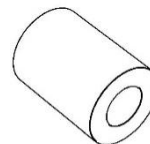


$\frac{1}{2}$ " Spacer

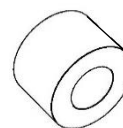


Vertical Mounting Bars (2pcs)

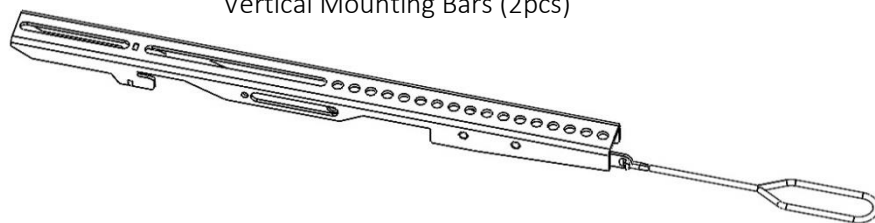

M8 X 40mm Screw

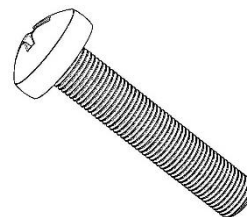


Square Multi-mount Washer



M8 X 12mm Screw




M8 X 25mm Screw

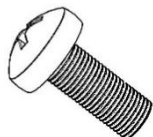


M6 X 12mm Screw



M6 X 40mm Screw

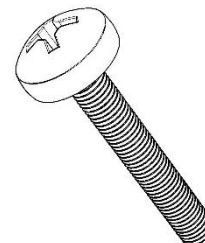


M6 X 25mm Screw

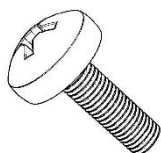

The VESA pattern is the configuration of 4 threaded holes on the back of TVs used for mounting the TV.

Step 18: VESA Pattern

Measure the distance from the top of the TV to the center of the VESA pattern.

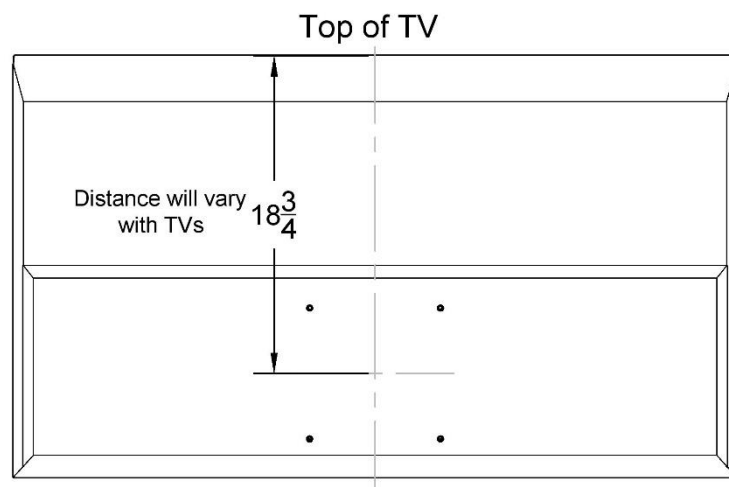


M6x12 FHMS (4)

Hardware




Step 19: Screen Backplate

Use the measurement found in step 18 to *generally* match the distance from the top of the mechanism to the center of the Screen Backplate. It is unlikely that the holes will match up exactly so adjust the Backplate down to the next available holes. Now attach the Screen Backplate to the screen support using four M6x12 FHMS.

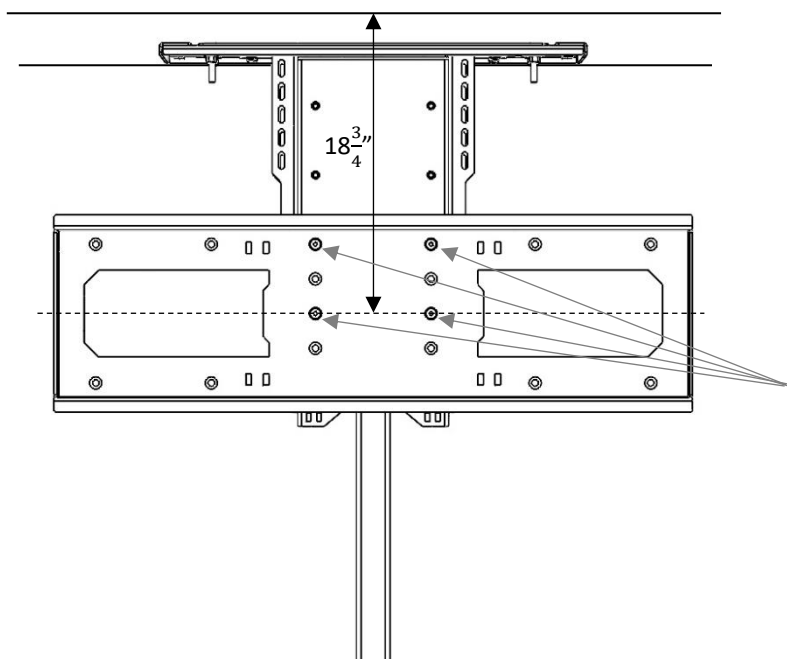


Step 20: Vertical Mounting Bars

Attach the Vertical Mounting Bars to the TV with equal measurements from the top and bottom of the TV. *Note: the slots in the vertical mounting bar are closer to the top of the TV.*

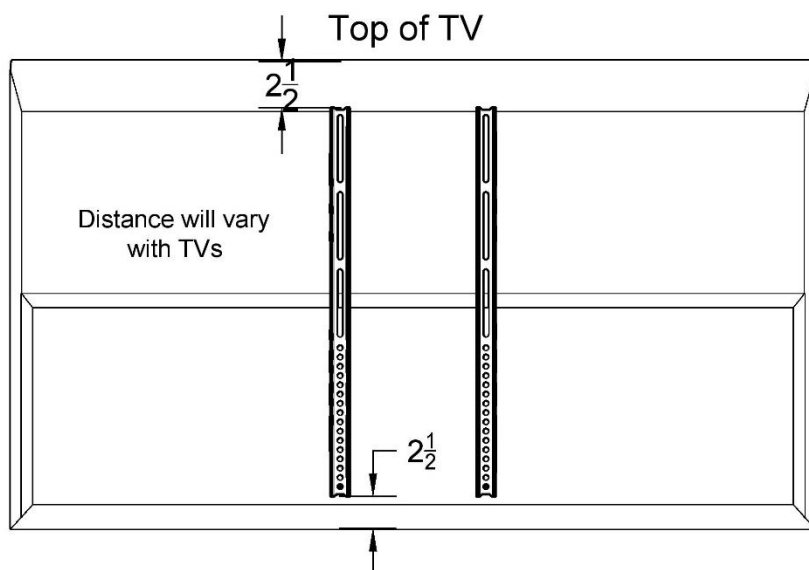


There are several different scenarios for attaching the vertical mounting bar. The size and length of screws will vary from TV to TV.

For a flat/unobstructed back, use this configuration. The width of the screws will vary with the diameter of the VESA pattern. **DO NOT OVERTIGHTEN SCREWS, OR DAMAGE TO TV MAY OCCUR.**

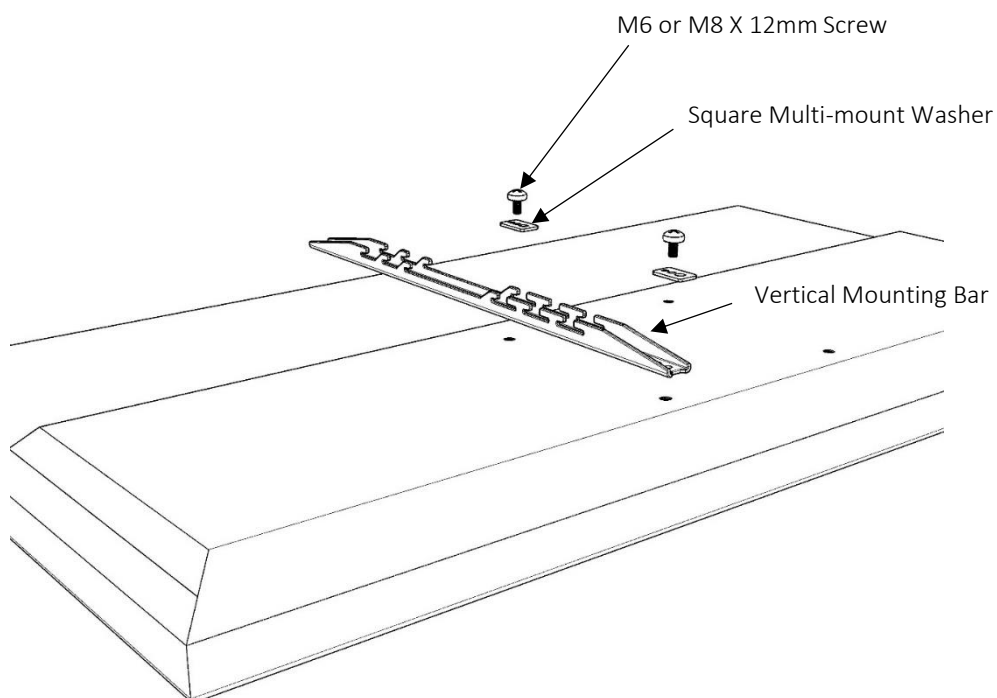


For an obstructed back, use this configuration. The length of spacers and screws will vary with the depth of the obstruction. The width of the screws will vary with the diameter of the VESA pattern. **DO NOT OVERTIGHTEN SCREWS, OR DAMAGE TO TV MAY OCCUR.**

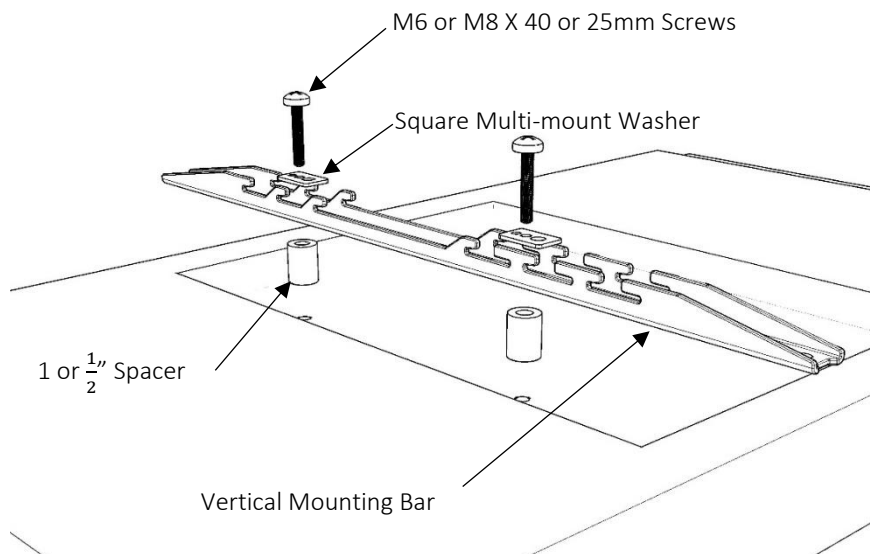


Step 21: TV Installation

Hang the TV by centering it on the lift and hooking the vertical mounting bars onto the screen backplate. Note: you may need to remove the TV and adjust the mounting bars or backplate, so the TV's final position is slightly below the top of the mechanism. $\frac{1}{4}$ " - $\frac{1}{8}$ " below the bottom of the lift top is optimal.

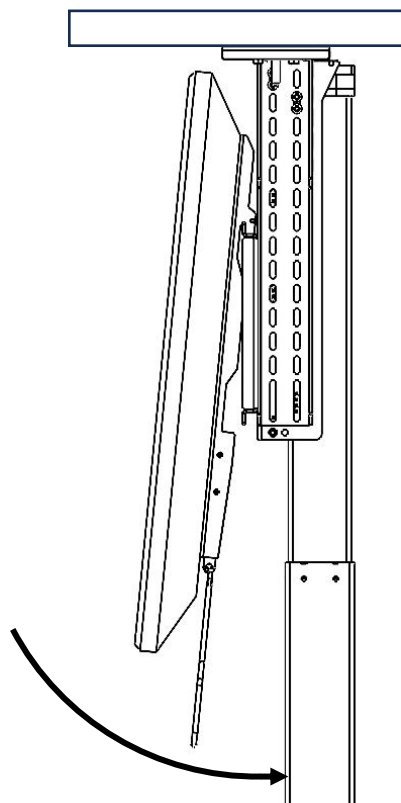


Step 22: Securing the TV Once the TV is hung and is centered on the lift mechanism, tighten the screws on the back of the Vertical Mounting Bars to lock the TV in position.

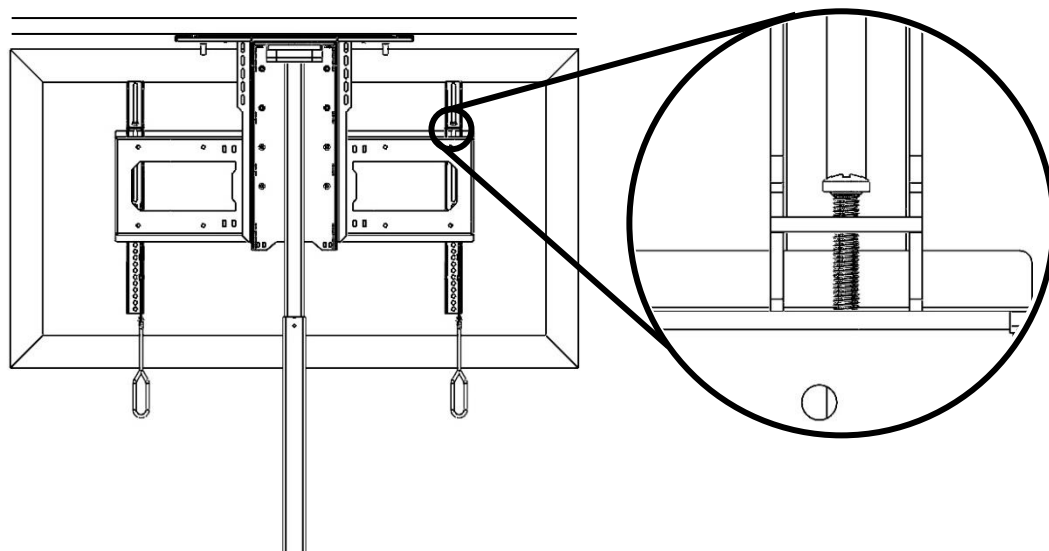

Mattress Support Installation: Step 23

Step 23

Attach the Legs to the Mattress Support. The Legs should be threaded through the side opposing the Barrel Nuts.

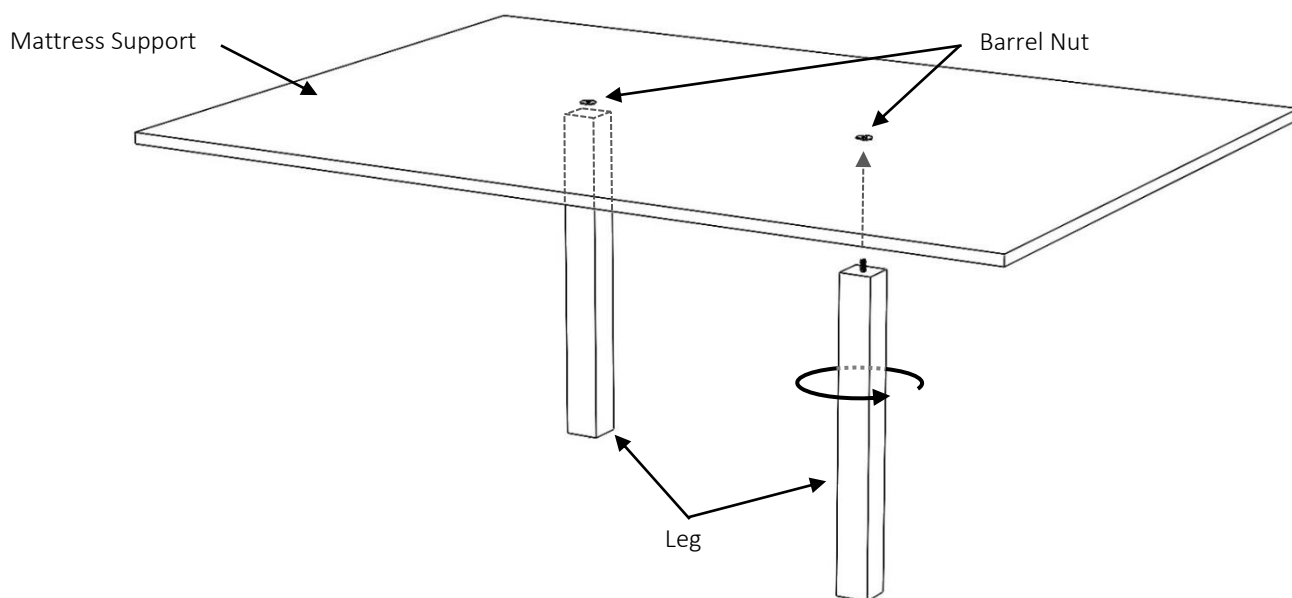

Set Mattress Supports into space between cabinets.

