
RF Remote Instructions

Installation

- connect the power supply and the motor unit to the remote receiver. 2 different plug sizes make this connection only possible to make in the right way
- after having connected the plugs, the blue light will be lit
- push the emitter buttons and the motor unit will move up and down
- o for stopping the motion one of the buttons need to be pushed again

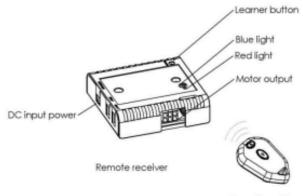

Remote emitter

Learning

- if the remote receiver does not respond when pushing the emitter buttons, reset the receiver. After that, code the emitter and receiver together again.
- it is possible to code up to 10 remote emitters to the remote receiver.

Coding

- push the learner button on the receiver for less than 1 sec.
- push one of the emitter buttons
- the red light will start flashing
- push one of the emitter buttons again and the red light will turn off
- the units now are coded together with a unique code

Reset

 push and hold down the learner button on the receiver for 10 sec. (will be reset when the red light start to blink).

External rocker switch

 the external rocker switch #9 can be connected to the receiver, if a fixed operation unit is required. This should always be fitted or accessible in case the RF handset or battery fails.

Trouble shooting


- check the plug connections
- check whether the blue light is on
- reset the receiver and make a new coding
- always test the lift on the manual rocker switch
- see www.venset.com , click "support"



Change of battery in RF emitter, type 27A/12V

- 1.) Remove the three screws on back side
- 2.) Remove the lid on back side
- 3.) Lift up old battery. In case of a leaking battery wear protection gloves.
- 4.) Place new battery with positive polarity pointing to the mark VCC on the PCB.
- 5.) Place lid on back side and tighten the three screws

Do not deposit used batteries with the household waste use special waste collection facilities for used batteries.

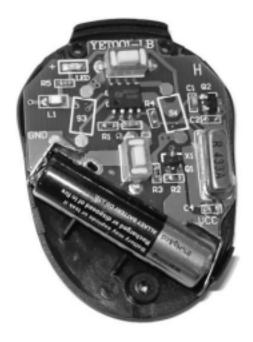



Questions?

Our team is happy to assist you.

Ph: (801) 901-8249

@: contact@wildwoodtvliftfurniture.com

www.wildwoodtvliftfurniture.com

